User Guide

INSIGNIA™

8" and 10" Digital Picture Frames

NS-DPF8PR/NS-DPF10PR

NS-DPF8PR/NS-DPF10PR Digital Picture Frames

Contents

Introduction 1
Safety information 2
Features 3
Setting up your frame 9
Using your frame 13
Maintaining 41
Troubleshooting 42
Specifications 44
Legal notices 45
6-month limited warranty 47

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your new digital picture frame is designed for reliable and trouble-free performance.

Safety information

Always follow these basic safety precautions when using your digital picture frame. This will reduce the risk of fire, electric shock, and injury.

Warnings

To reduce the risk of fire or shock hazard, do not expose the frame to rain or moisture and unplug the frame during lightning storms.

To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

There is a risk of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type of battery.

Placement—To prevent fire or electric shock, do not expose this digital picture frame to rain or moisture. To prevent it from falling do not place it on an unstable cart, stand, tripod, bracket, or table. Keep the unit away from strong magnets, heat sources, direct sunlight, and excessive dust.

Installation—Make sure that the digital picture frame is used in accordance with the instructions and illustrations provided in this manual.

Objects and liquids—Do not push objects of any kind into the digital picture frame through openings. Do not spill or spray liquid of any kind on or in the digital picture frame (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.

Disassembly—Do not attempt to disassemble the frame. There is a risk of electric shock. Contact qualified service personnel if your digital picture frame is in need of repair.

Cleaning the digital picture frame—When cleaning, make sure the frame is unplugged from the power source. Use the supplied cleaning cloth, or a cloth slightly dampened with water for cleaning the exterior of the frame only.

Features

- 1 GB internal memory.
- Displays digital pictures (JPEG format) and picture slideshows without a computer.
- Displays pictures directly from an inserted memory card or USB device (not included).
- Bright, clear TFT LCD screen.
- Compatible with a wide variety of memory cards, including:
  - Secure Digital™ (SD)
  - SDHC™
  - CompactFlash®
  - MultimediaCard (MMC™)
  - Memory Stick®
  - Memory Stick Pro Duo™ (requires the included adapter)
  - xD™
  - microSD™ (requires adapter - not included)
- Compatible with USB flash drives.
- Mini-USB connector to connect the digital picture frame to your PC.
- Multi-image mode displays multiple pictures at the same time in a slideshow.
- Auto rotation of pictures based on the frame's orientation.
- Playback of MP3, AAC, and WMA audio file formats.
- Slideshow with background music.
- Playback of MJPEG and MPEG4 in AVI and MOV video file formats.
- Clock and calendar display.
- On-frame button controls and RF remote control.

Package contents

- Digital picture frame
- Accessory frames (2)
- AC power adapter
- Memory Stick Duo Pro adapter
- *User Guide* CD
- *Quick Setup Guide*
- Remote control with battery (CR2025)
- Cleaning cloth

Connectors

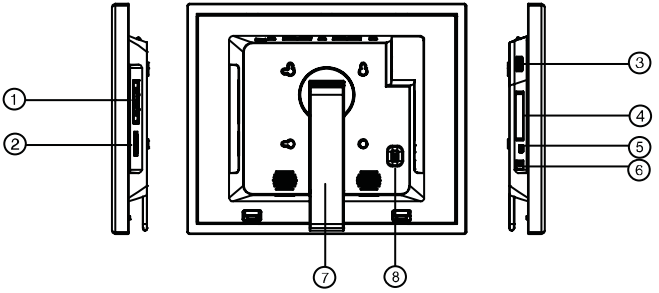

#	Description
1	Memory card slot. Supports CompactFlash (CF)

#	Description
2	Memory card slot, supports: • Secure Digital™ (SD) • SDHC™ • MultimediaCard (MMC™) • Memory Stick® • Memory Stick Pro Duo™ (requires included adapter) • xD™ • microSD™ (requires adapter - not included)
3	USB (type A) port
4	Remote control slot
5	Mini USB port
6	DC power connector. Plug the AC adapter in here.
7	Adjustable stand
8	Power On/Off switch

Top (buttons)

You can access most of the frame's features by using either the buttons on top of the frame or by using the remote control. Selecting files for copying, deleting, or viewing requires the remote control, and the instructions in this guide refer to remote control buttons (except where noted).

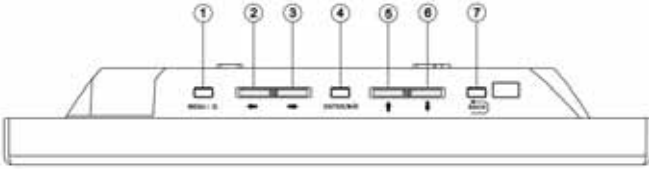

#	Button	Description
1	MENU	Press to open the *Setup* menu. Press and hold for three seconds to enter standby mode.
2	Left arrow	Press to move the menu selection left or to display the previous picture.
3	Right arrow	Press to move the menu selection right or to display the next picture.
4	Enter/▶/II	Press to select menu items. During a slideshow, press to pause or resume.
5	Up arrow	Press to navigate up.
6	Down arrow	Press to navigate down.
7	Back	Go back to previous selection or screen.

Remote control

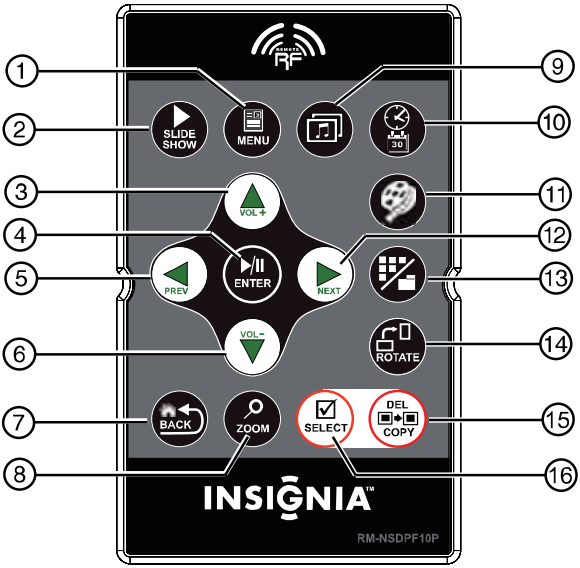

#	Button	Description
1	MENU	Press to display the *Setup* menu.
2	▶ SLIDE SHOW	Press to start a slideshow or toggle the multi-image Display mode.
3	▲ (Up)/VOL+	Press to move the selection up. Press to increase the volume during music/video playback.

#	Button	Description
4	ENTER/PLAY/PAUSE	Press to select menu options. During playback, press to pause or resume the slideshow.
5	◀ (Left) PREV	Press to move the menu selection left or to display the previous picture/song/video.
6	▼ (Down)/VOL-	Press to move the menu selection down. Press to decrease the volume during music/video playback.
7	BACK	Press to go back a screen.
8	ZOOM	Press to magnify the picture.
9	Picture and Music	Press to begin a slideshow with background music.
10	Clock/Calendar	Press to display the clock and calendar on the screen.
11	Video	Press to start video playback.
12	▶ (Right) NEXT	Press to move the menu section right, display the next picture, or select the next picture/song/video.
13	(thumbnail/folder)	Press to enter Thumbnail mode, or to display files and folders.
14	ROTATE	Press to rotate the picture.
15	DEL/COPY	Press to delete selected pictures from internal memory or to copy selected pictures/songs/videos from an inserted memory card or USB device to internal memory.
16	SELECT	Press to select a file to copy, delete, or to add to a customized slideshow.

Setting up your frame

Setting up the remote control

To set up the remote control:

- Remove the plastic tab that extends past the bottom edge of the remote control. This tab protects the battery. The remote control will not work until it is removed.

Setting up the frame

To set up the frame:

1. Pull out the stand to set the frame in landscape orientation.
2. Turn the stand counterclockwise 90° to set the frame in portrait orientation.

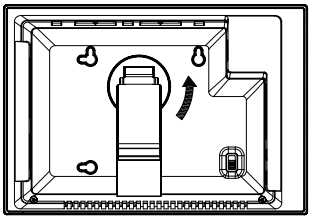

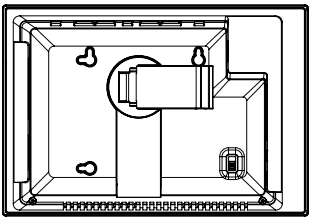

3. Plug the AC power adapter into the frame's DC power connector and into an AC power outlet.

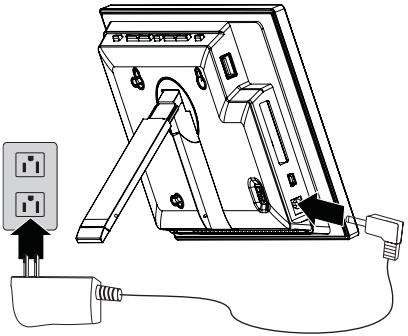

4 Extend the stand from the back of the frame, then place the frame on a flat surface. Adjusting the stand changes the frame's viewing angle.

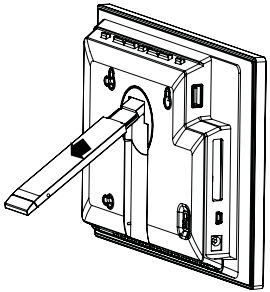

The frame automatically turns and starts playing a slideshow of the pictures stored in internal memory. This slideshow is called Demo mode.

To turn off Demo mode, point the remote control at the front of the frame and press (**ENTER/ ▶/II**).

Tip

You can also disable and re-enable Demo mode from the *Setup* menu. For instructions, see "Setup and Menu options" on page 37.

5 To change the accessory frame, press the two release tabs toward the center of the frame to unlock the display chassis from the accessory frame. Gently separate the display chassis and the accessory frame. Remove the safety glass and place it in the replacement frame. Mount the display chassis and slide the release tabs back to the Locked position.

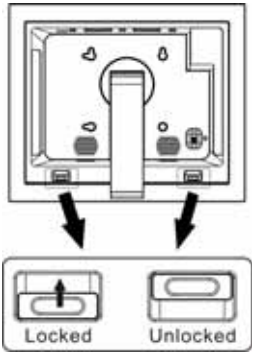

Using your frame

You can use your digital picture frame to:

- Play a slideshow of pictures
- Play a slideshow of pictures with background music
- Adjust a picture's view
- Listen to music
- Watch videos
- Display a clock and calendar with pictures

Playing slideshows

To play an instant slideshow from a memory card or USB device:

1 Insert a memory card or USB device into one of the available memory slots or the USB port.

> **Caution**
>
> Memory cards fit into the card slots in only one direction. Do not force a memory card into a slot. The card should fit snugly when inserted correctly. Some cards require an adapter to fit correctly. For more information on supported memory cards, see "Specifications" on page 44.

A slideshow of pictures from the memory card or USB device automatically starts to play.

2 Press (**ENTER/ ▶/II**) to pause the slideshow on a particular picture. Press (**ENTER/ ▶/II**) again to resume the slideshow.

To manually play a slideshow:

1 Insert a memory card or USB drive into one of the available memory slots or the USB port.

2 Press (**BACK**) repeatedly until the *Home* menu opens.

3 Press ◀ or ▶ to select a memory device or an inserted memory card, then press (**ENTER/ ▶/II**).

Note

The option to select a media type or USB device is disabled if there is no media of that type in the corresponding slot or port.

Tip

You can press (thumbnail/file list) to switch between thumbnail mode and file list mode. Thumbnail mode displays all files in the selected memory device, and file list mode displays files and folders.

4 Press ▶ **SLIDESHOW**. A slideshow begins that displays the pictures contained in the memory device you selected.

5 To toggle between single image and multi-image slideshow modes, press ▶ **SLIDESHOW** during slideshow playback.

Playing slideshows with background music

To play a slideshow with background music:

1 Insert a memory card or USB drive into one of the available memory slots or the USB port.

2 Press (**BACK**) repeatedly until the *Home* menu opens.

3 Press ◀ or ▶ to select the internal memory or an inserted memory device, then press **ENTER**. For instructions on copying files from a memory card or USB device to the internal memory, see "Copying files to internal memory" on page 25.

Note

The option to select a media card or USB device is disabled if there is no media of that type in the corresponding slot or port.

Tip

Make sure that there are audio files stored in the internal memory or on an inserted memory device if you want to play a slideshow with background music.

Press (♫) at any time to enter Pictures & Music mode.

4 Press (**ENTER/** ▶/❚❚). The *Select Media* menu opens.

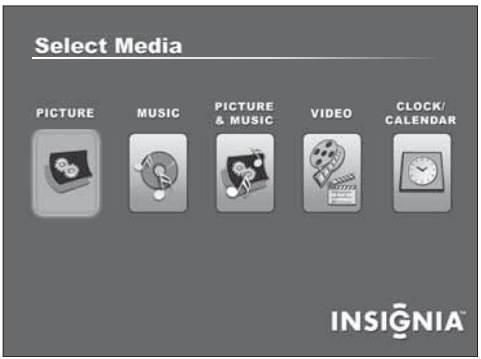

5 Press ◀ or ▶ to select **PICTURE & MUSIC**, then press (**ENTER/** ▶/❙❙).

6 Press ▲ or ▼ to select an audio file, then press (**ENTER/** ▶/❙❙) to confirm.

Note

The PICTURE & MUSIC function will only operate correctly if you select an audio file to play from a folder that also contains pictures.

Listening to music

To listen to music:

1 Press (**BACK**) repeatedly until the *Home* menu opens.

2 Press ◀ or ▶ to select the internal memory or an inserted memory device. For instructions on copying files from a memory card or USB device to the internal memory, see "Copying files to internal memory" on page 25.

Note

The option to select a media card or USB device is disabled if there is no media of that type in the corresponding slot or port.

Tip

Make sure that there are audio files stored in the internal memory or on an inserted memory device if you want to listen to music.

3 Press (**ENTER/ ▶/II**). The *Select Media* menu opens.

4 Press ◀ or ▶ to select **MUSIC**, then press (**ENTER/** ▶/II). The *Music* menu opens.

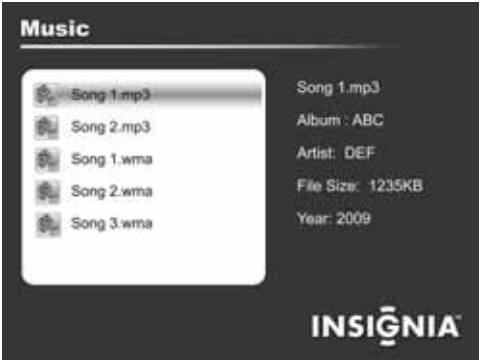

5 Press ▲ or ▼ to select an audio file, then press (**ENTER/** ▶/II) to play the file.

Playing videos

To play a video:

1 Press (**BACK**) repeatedly until the *Home* menu opens.

2 Press ◀ or ▶ to select the internal memory or an inserted memory device. For instructions on copying files from a memory card or USB device to the internal memory, see "Copying files to internal memory" on page 25.

Note

The option to select a media card or USB device is disabled if there is no media of that type in the corresponding slot or port.

Tip

Make sure that there are video files stored in the internal memory or on an inserted memory device if you want to watch a video.

Press at any time to enter Video mode.

3 Press (**ENTER/ ▶/II**). The *Select Media* menu opens.

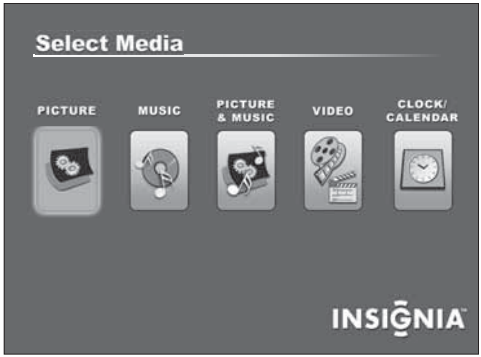

4 Press ◀ or ▶ to select **VIDEO**, then press (**ENTER/** ▶/II). The *Movie* menu opens.

5 Press ▲ or ▼ to select a video, then press (**ENTER/** ▶/II) to play the file.

Displaying the clock and calendar

To display the clock and calendar:

1 Press (**BACK**) repeatedly until the *Home* menu opens.

2 Press ◀ or ▶ to select the internal memory or an inserted memory device. Pressing the **Clock/Calendar** button from the Home menu plays images from the selected memory drvice or internal memory.

For instructions on copying files from a memory card or USB device to the internal memory, see "Copying files to internal memory" on page 25.

Note

The option to select a media card or USB device is disabled if there is no media of that type in the corresponding slot or port.

3 Press (**ENTER/ ▶/II**). The *Select Media* menu opens.

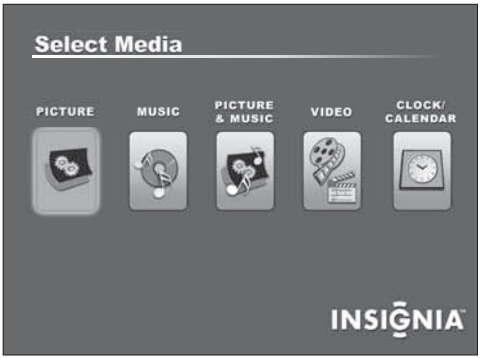

4 Press ◀ or ▶ to select **CLOCK/CALENDAR**, then press (**ENTER/ ▶/II**). The *Clock/Calendar* screen opens and a slideshow of pictures in the selected memory device automatically begins.

5 You can also listen to music in clock/calendar mode. To do so, press (MENU), then press ▼ to select **Music Play**. Press ▶ to select **On**, then press (**ENTER/** ▶/II).

Copying files to internal memory

You can copy a single file, multiple files, or all files from an inserted memory card or USB device to the frame's internal memory.

Notes

Using the frame alone, you cannot copy files from the internal memory to an inserted memory card or USB device, and you cannot copy files from one inserted memory card or USB device to another.

Because you cannot copy files back from the frame to a memory card or USB device using the frame, the frame should not be considered your primary file storage method. Make sure that you have the files stored elsewhere (such as a memory card).

To copy files from the internal memory to an inserted memory card or USB device, you can use a USB cable to connect the frame to a computer. You can then copy files between the memory card, the USB device, the frame's internal memory, and the computer.

To copy selected files to internal memory:

1 Press (**BACK**) repeatedly until the *Home* screen opens.

2 Press ◀ or ▶ to highlight the memory card or USB device you want to copy from, then press (**ENTER/** ▶/II). The *Select Media* menu opens.

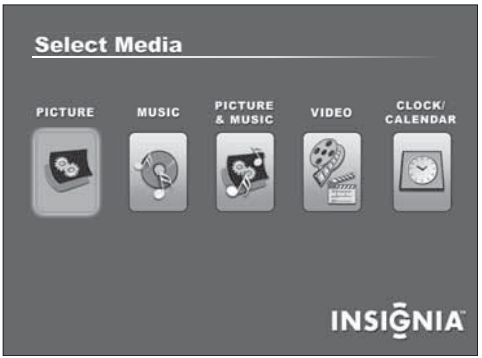

3 Press ◀ or ▶ to highlight **PICTURE**, **MUSIC**, or **VIDEO**, then press (**ENTER/** ▶/❚❚). The *Picture file/ Video file* screen opens.

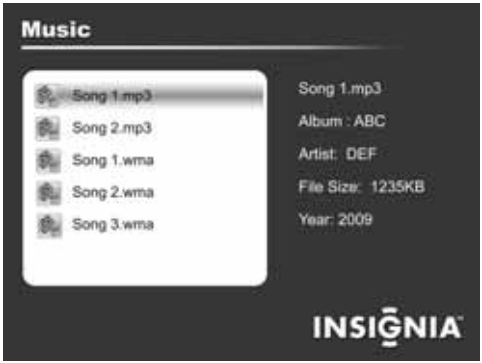

4 Press ▲, ▼, ◀, or ▶ to highlight each file you want to copy, then press (**SELECT**) to mark it. A check mark appears in the upper-right corner of each marked thumbnail. Mark as many pictures as you want to copy.

Tip

To deselect a file, press (**SELECT**) again.

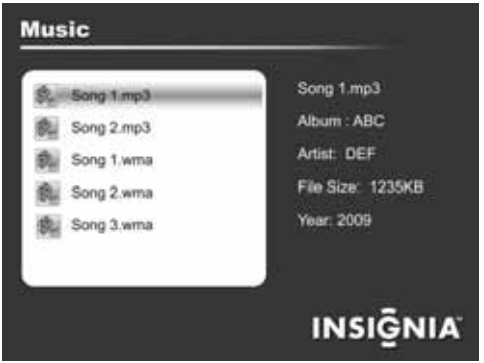

5 Press (**DEL**/**COPY**), then press ▲ or ▼ to select **Copy Selected** (to copy the files you select), or **Copy All** (to copy all files).

6 Press ▶ to open the submenu, then press ▲ or ▼ to select **Yes**.

7 Press (**ENTER/** ▶/❚❚). The files are copied.

To copy files from your PC to internal memory or inserted memory device:

1. Make sure that your computer has been started before you begin.
2. Connect the mini plug of the supplied USB cable to the mini USB port on the digital picture frame, then connect the other end to an available USB port on your computer.
3. Navigate to "My Computer" (Windows operating systems). The frame's internal memory and any inserted memory cards appear as “removable disks.” Each memory area appears as a separate removable disk.
4. Use your computer's standard drag and drop or copy and paste procedures to move pictures on your computer to the frame's internal memory, or a memory card or USB device you inserted in the frame.

Deleting files from internal memory

Note

You cannot delete files from an inserted memory card or USB device using the frame alone. Because you cannot copy files from the frame to a memory card or USB device, the frame should not be considered your primary file storage method. Make sure that you have the files stored elsewhere (such as a memory card).

To delete files from internal memory:

1 Press (**BACK**) until the *Home* screen opens.

2 Press ◀ or ▶ to highlight **Internal Memory**, then press (**ENTER/** ▶/❚❚). The *Thumbnail/Audio file/Video file* screen opens.

3 Press ◀/▶/▲/▼ to highlight each file you want to delete, then press (**SELECT**) to mark it. A check mark appears in the upper-right corner of each marked thumbnail or next to the file. Mark as many files as you want to delete.

4 Press (**DEL/COPY**), then press ▲ or ▼ to select **Delete Selected** (to delete only the files you select) or **Delete All** (to delete all files in memory).

5 Press ▶ to open the submenu, press ▲ or ▼ to select **Yes**, then press (**ENTER/ ▶/II**). The files are deleted.

To delete files with your PC:

1 Make sure that your computer is on before you begin.

2 Connect the mini plug of the supplied USB cable to the mini USB port on the digital picture frame, and connect the other end to an available USB port on your computer.

3 Navigate to "My Computer" (Windows operating systems). The frame's internal memory and any inserted memory cards or USB devices appear as “removable disks.” Each memory area will appear as a separate removable disk.

4 Find and highlight the files you want to delete, then use your computer's standard procedures to delete files from the frame's internal memory or an inserted memory card or USB device.

Customizing slideshows

You can set up a slideshow using either all of the pictures or selected pictures.

To set up a slideshow of selected pictures:

Tip

A slideshow of selected pictures can only be set up by using the remote control.

1 Press (BACK) until the *Home* screen opens.

2 Press ◀ or ▶ to select a memory device, then press (**ENTER/** ▶/❙❙). The *Select Media* menu opens.

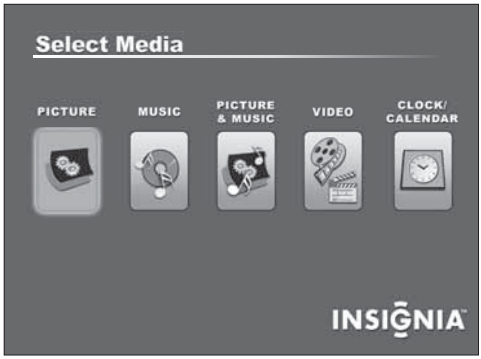

3 Press ◀ or ▶ to highlight **Picture**, then press (**ENTER/** ▶/❙❙).

- OR -

If a slideshow is in progress, press (**BACK**) or (thumbnails) to access the thumbnail screen.

The *Thumbnails* screen opens.

4 Press ◀/▶/▲/▼ to highlight the picture you want to include in the slideshow, then press (**SELECT**). A check mark appears at the upper-right corner of the thumbnail.

5 Repeat until all pictures you want to add to the slideshow are selected, then press **ENTER**, or continue to Step 6.

6 Press (**DEL**/**COPY**), then press ▲ or ▼ to select **Play Selected**.

7 Press ▶ to open the submenu, press ▲ or ▼ to select **Yes**, then press (**ENTER/** ▶/❚❚). A slideshow of the selected pictures is played.

8 To end the slideshow and clear the selected items, press (**BACK**). This returns you to the *Thumbnail* screen. From there, you may select a photo to view or begin another slideshow using standard procedures.

Customizing the picture display

You can rotate, magnify, and display information about any picture that the frame displays.

To rotate a picture:

1 While a picture is displayed full screen (not as a thumbnail), press (**ROTATE**). The picture is rotated 90° clockwise with each press of the button.

2 Press (ENTER/ ▶/❚❚) to continue the slideshow.

Tip

When you rotate a picture stored in internal memory, your frame stores the rotation information.

To rotate a picture automatically based on frame orientation:

- While a picture is displayed full screen (not as a thumbnail), use the adjustable stand to set the frame in landscape orientation or turn the stand counter-clockwise by 90° to set the frame in the portrait orientation. Pictures will rotate automatically based on the frame's orientation.

To magnify a picture:

1 While a picture is displayed full screen (not a thumbnail), press (**ZOOM**). The picture is magnified in size each time you press the button (there are three zoom levels), until it returns to the normal size.

Tip

While the picture is magnified, press the arrow buttons to pan the picture so you can see the parts that are off the screen.

2 Press (ENTER/ ▶/❚❚) to continue the slideshow.

Setting viewing options

You can change all of the viewing options in the *Setup* menu using the buttons on the top of the frame or on the remote control. You can display the *Setup* menu at any time by pressing **MENU**. Only the available setup options are displayed for each menu.

To set viewing options:

1. Press (**BACK**) repeatedly until the *Home* screen opens.

2. Press the arrow buttons to highlight the **SETUP** icon, then press **ENTER**. The *Setup* menu opens.
3. Press ▲ or ▼ to highlight an option, then press **ENTER** to select the option. A second menu opens, listing the available settings. A square icon (■) to the right of an option shows the current setting.
4. Press ▲ or ▼ to highlight a setting, then press **ENTER** to select the setting.
5. When you are finished, press (**BACK**) to close the *Setup* menu and return to the previous screen.

Setup and Menu options

The following table lists and describes *Setup* and MENU options:

Menu option	Settings	Description
Slideshow interval	5 Seconds 10 Seconds 30 Seconds 1 Minute 1 Hour 24 Hours	Sets the interval between each picture transition in a slideshow. **Note**: Selecting the Cross Fade or Motion Zoom slideshow transitions disables the selected slideshow interval.
Slideshow transition	Normal Random Fade Curtain Left-Right Curtain Top-Bottom Open-Door Cross-Comb Cross-Fade Motion Zoom	Sets the special effects used to transition from one picture to the next in a slideshow. The **Normal** setting plays slideshows without any special transition effects. The **Random** setting cycles through the available special transition effects during slideshows. The Motion Zoom setting zooms and pans pictures (sometimes known as the "Ken Burns" effect). When paired with the Face Detection feature, faces in pictures will be zoomed and panned.
Slideshow shuffle	On Off	Displays pictures in a different (random) order than they appear on the selected memory device.

Menu option	Settings	Description
Date/Time stamp	On Off	Displays the date and time that a picture was taken, during slideshows. This feature is not available in multi-image display mode.
Image Information	On Off	Displays the name, date/time, resolution, and size of the image.
Auto Image Correction	Red Eye Reduction Color Enhancement	**Red Eye Reduction**—Automatically corrects the red eye effect sometimes seen in pictures of people. **Color Enhancement**—Automatically enhances the colors in pictures to make them more vivid.
Panorama Scroll	On Off	When **Panorama Scroll** is enabled, pictures that were taken in panorama mode will be scrolled across the screen during slideshows rather than resized to fit the screen.
Picture Display Format	Normal Zoom	Adjusts how the image is sized to fit the screen. If the pictures you are viewing are in 4:3 format, they will have black bars on the sides of the screen with the Normal setting enabled. Selecting one of the other modes will hide the black bars by zooming in on the image and stretching or cropping it.

Menu option	Settings	Description
Copy type	Normal	Maintains the picture's original resolution when a picture file is copied from a memory card or USB device to the frame's internal memory.
	Resize	Optimizes (compresses) a picture file when it is copied from a memory card or USB device to the frame's internal memory. Enabling this feature will allow you to store more files in your frame's internal memory.
Date & Time setting		Adjusts the date and time to display the current date and time in Clock/Calendar mode.
Schedule	Power On/Off Time	Set the digital picture frame to power on/off automatically, at a specified time.

Menu option	Settings	Description
Power Saving	Sleep Timer: Off 15 Minutes 30 Minutes 1 Hour 2 Hours 6 Hours	If the buttons on the frame or remote control are not used for the specified time, the frame enters Power Saving (Standby) mode. To turn the frame back on, press any button on the frame.
	Auto Room Brightness	When this setting is enabled, the frame's screen brightness will automatically be adjusted, based on the room's lighting contditions.
	Room Light Standby	When this setting is enabled, the frame will automatically enter Standby mode when room light dims to one lumen. The frame will automatically turn back on when room light increases to 3 lumens.
Language	English Spanish French	Sets the language used in the setup menus.
Sort image mode	File name A-Z File name Z-A Date, oldest to newest Date, newest to oldest	Lets you sort files in the order you select.

Menu option	Settings	Description
Factory Settings	Demo Mode On/Off	Displays pictures from internal memory for demo purposes.
	Reset All Settings No/Yes	Resets all settings to factory default values.
	Erase All Memory No/Yes	Erases all files from the internal memory.
	RF Learn mode	Pairs/programs remote with the frame. Follow the on-screen instructions to use this function.
	Software Version	Displays the firmware version.

Maintaining

Cleaning the digital picture frame

Clean the outer surface of the digital picture frame with the included cleaning cloth.

Replacing the remote control battery

To replace the remote control battery:

1. Turn the remote control over.
2. While pressing down on the ridged area of the battery cover, slide the battery tray out and remove the old battery.
3. Place a new CR2025 (or equivalent) lithium battery in the tray, with the positive (+) side facing up.
4. Slide the battery tray back into the remote control.

Troubleshooting

Problem	Solution
The frame will not turn on.	The power adapter is not securely connected to the picture frame, or the power switch is not on. Check power adapter connections, then switch the power on.
A memory card is inserted in the frame, but you can't view your pictures.	• Make sure that the memory card is one of the supported formats and that the files on the card are JPEG image files. • Turn the digital picture frame off and make sure that the memory card is inserted all the way into the card slot and is inserted correctly, then turn it back on. After a few seconds, you should see your first picture. • Try formatting the card. **Caution**: formatting the card will erase all files on the card. Back up the files on the card to your computer before attempting to format the card. • Some digital cameras save images in formats other than JPEG. Refer to your camera's manual for details.
The frame displays some pictures slower than others.	Higher resolution pictures load more slowly. Try using lower resolution pictures or down-sampling (compressing or resizing) them. See your camera's user guide for instructions on down-sampling your pictures, or see "Setting viewing options" on page 35 for instructions on automatically resizing and compressing your pictures while copying from them from an inserted memory card or USB device to the frame's internal memory.

Problem	Solution
Remote control does not work.	• Be sure to remove the plastic tab from the remote control's battery compartment before using the remote control for the first time. • The battery is dead. Replace with a CR2025 battery, then pair with the frame as described below. • The remote control is not correctly paired with the frame. From the *Home* menu, select the *Setup* menu, then select **Factory Settings**. Select **RF Learn Mode**, then select **Yes.** Follow the on-screen instructions to pair your remote with your frame.

Specifications

Screen size	NS-DPF8PR: 8" (203 mm) NS-DPF10PR: 10" (254 mm)
Screen format	Normal screen
Screen resolution	NS-DPF8PR: 800 x 600 pixels NS-DPF10PR: 1024 x 768 pixels
Memory card formats	• Secure Digital™ (SD) • SDHC™ • CompactFlash® • MultimediaCard (MMC™) • Memory Stick® • Memory Stick PRO Duo™ (requires included adapter) • xD™ • microSD™ (requires adapter - not included)
File formats	Standard JPEG MPEG4 (AVI and MOV), XVID MP3, AAC, WMA
USB	USB (type A) port and Mini (type B) port
Power input	100 V~240 V AC, 50~60 Hz
Power output	12 V DC, 1.5 A
Certification	FCC/PSE (adapter)
Internal memory	1 GB

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

Image and video use restrictions

Use of the images and video pre-loaded on the digital picture frame is limited to personal, non-commercial use. Consumer may not modify, duplicate, distribute, retransmit, republish, reproduce, or create derivative works from the pre-loaded images and video.

6-month limited warranty

Insignia Products ("Insignia") warrants to you, the original purchaser of this new **NS-DPF8PR** or **NS-DPF10PR** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of 6 months from the date of your purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Insignia brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Insignia during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for 6 months from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 25 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair person dispatched to your home.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Insignia to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO

THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289
www.insigniaproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2009 Best Buy Enterprise Services, Inc.
All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

www.insigniaproducts.com (877) 467-4289

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645
© 2009 Best Buy Enterprise Services, Inc.
All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries.
All other products and brand names are trademarks of their respective owners.

ENGLISH
09-0561